




United Pipe & Steel Delivery Safety Requirements

United Pipe & Steel is committed to *safely* delivering high-quality pipe products with exceptional service. With your help, every delivery and pickup can be completed as safely as possible for everyone involved.

When receiving a delivery or picking up from United Pipe & Steel, please follow the safety guidelines below:

- Position all trucks on a safe, stable, level surface before removing straps.
- Inspect the load for stability before unstrapping any material.
- During crane unloads, only the site's designated crane operator or qualified rigger may rig material on the trailer deck. All personnel must stay off the trailer and outside the designated fallout zone while material is being moved.
- United Pipe & Steel employees may not rig material during crane unloads or operate equipment at the delivery site.
- Trailer safety stakes must be installed on the opposite side of where the material is being loaded or unloaded from.
- United Pipe & Steel personnel have full authority during loading and unloading. No activity may proceed without their approval.
- No one may be on the trailer or within the fallout or active loading zone during loading or unloading.

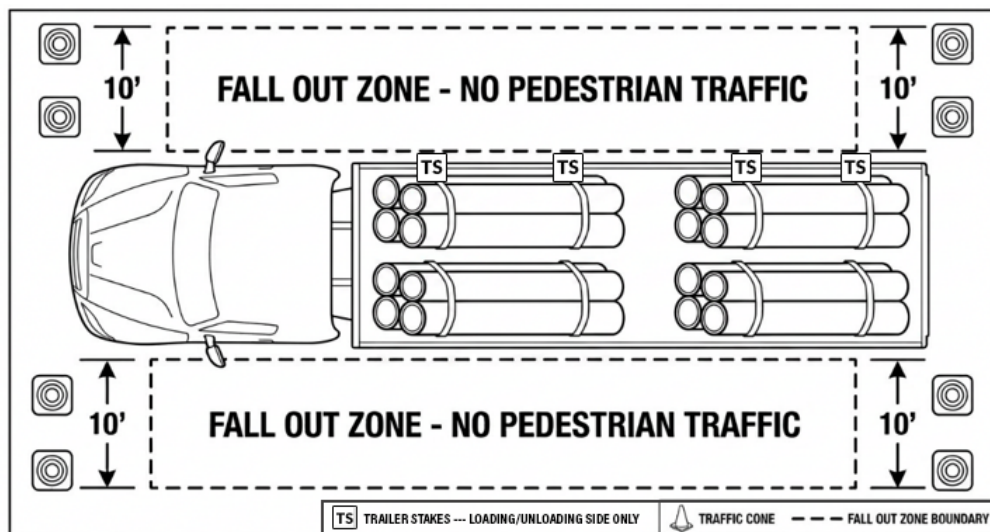

Please note: Fallout zone size is a minimum guideline and may vary depending on the size, weight, and height of the material being handled.

We appreciate your adherence to these requirements as we work together to maintain a safe environment for both your team and ours, while continuing to provide the level of service you expect from United Pipe & Steel.